

se:hive circle


Used as a retreat, the se:hive product family creates flexibly adaptable room structures that fit into existing facilities as well as new space concepts.

se:hive circle includes fully upholstered benches with a design that blends in seamlessly to create a private room solution. Thanks to its work-focused orientation and seat height, which is adapted to standard table dimensions, se:hive circle combines functionality with comfort and creates an inviting and sheltered atmosphere.

Advantages

- se:hive circle visually divides open space or large areas, creates zones and contributes to a pleasant office atmosphere.
- Different sizes and shapes cater for diverse use.
- The fabric-covered elements effectively reduce noise and create quieter retreats within the often noisy open space.
- The retreat offers solutions for various application scenarios such as a focused workstation, informal meetings or relaxed conversations.
- The soft seating elements and other work solutions expand the application potential from individual product to whole-space solution – from private retreats to open communication areas.
- The temporary retreat in modular design provides both visual and acoustic screening.



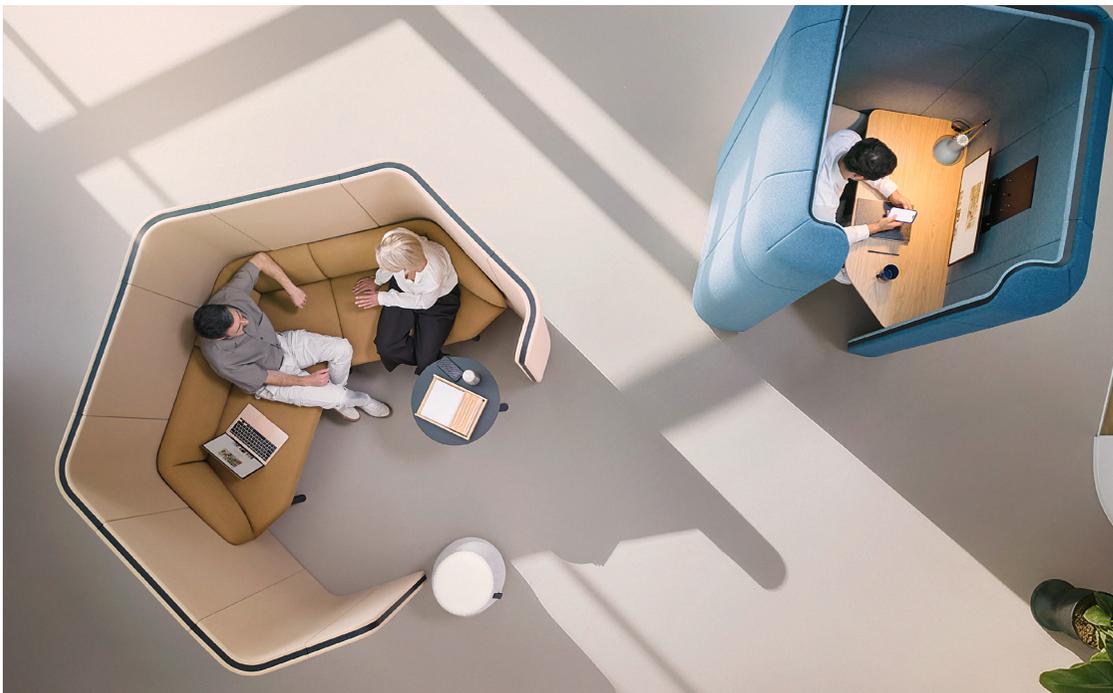

Features

- se:hive circle consists of enclosures with integrated sofa elements.
- Fixed configurations with backrest are available for the retreat.
- The seat height of the bench is 450 mm (table height).
- Connecting brackets provide stability and are hooked into the bottom of the se:hive module as well as fixed to the bench. The brackets (and therefore also the bench) can be removed retrospectively without leaving visible screw holes.
- The recommended user weight per seat is up to 110 kg.

Options/accessories


- The circle version can be configured as a 3- or 5-seater.
- The retreat is available with and without an add-on.
- The elements can also be planned with supplementary angled elements and face-to-face configurations.
- This bent sheet metal monitor mount comes in two versions:
 - 1) For se:hive circle without attachment/add-on: the mount is simply hooked over the wall module
 - 2) For se:hive circle with attachment/add-on: the mount is inserted into the groove at the top of the wall module. The attachment is mounted above it in the usual way.

More about se:hive circle


- 🔗 [Website](#)
- 🔗 [Certificates](#)
- 🔗 [Operating instructions](#)
- 🔗 [Environment Product information](#)
- 🔗 [CAD data](#)

Dimensions (all dimensions in mm)



Heights

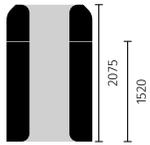


Bench (using the example of a 2-seater)

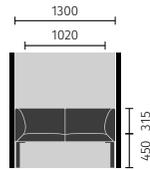

3-seater

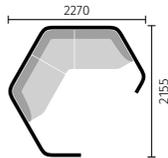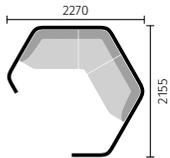

5-seater

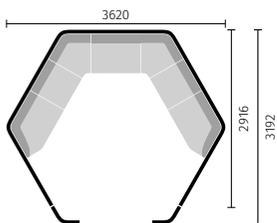


Colours

Screen [↗](#) Further choice of options



Upholstery [↗](#) Further choice of options

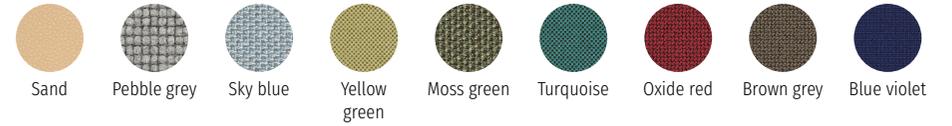

Frame

